

CANDY FLOSS MACHINE INSTRUCTIONS

- Instructions must be read and understood BEFORE operating this machine. Any damage due to improper use will be charged at full cost of repair/replacement.
- Machine must be returned clean.
- Machine must be used by a responsible adult.

CAUTION: This machine uses single phase mains electricity and surfaces will get extremely hot.

TO MAKE CANDYFLOSS: (1 teaspoon of flossine = 1kg sugar)

1. Attach stainless steel bowl with the 4 hinged clips.
2. Turn on machine using the power switch (right switch).
3. Turn on the heat using the heat switch (left switch).
4. Allow 10 minutes for machine to warm up.
5. Pour 1 scoop of mixture into the centre of the spinning head.
6. Using a candy floss stick, rotate it just above the spinning head to collect the floss and form a ball.

SHUTTING DOWN

1. Turn the heat and power switch off and let it cool down.

CLEANING MACHINE BEFORE RETURNING - DISCONNECT FROM POWER SUPPLY

1. Remove stainless steel bowl by releasing the 4 hinged clips.
2. Clean stainless-steel bowl with hot water and dishwashing liquid.
3. Clean the centre steel head with a hot damp sponge or cloth on the outside/inside to ensure all excess sugar is removed. Be patient, allow the water to dissolve the residue. **DO NOT USE ABRASIVE CLOTHS OR CLEANERS.**
4. Wipe down all outside surfaces of the machine, do not get water inside the back of the machine.

Please return complete machine, power cord, and scoop

